

## TRN-300-P

# Photogrammetry turntable, 300mm Dia.

### **Specification:**

Table Diameter: 300mm

Table Load Capacity: 20Kg

Table speed range: Slow: ~ 1rpm, Medium ~ 3rpm, Fast ~ 6rpm

Number of shots/rotation options:

1, 4, 10, 30, 60, 90, 120, 150, 180, 360.

Shot delay - seconds (Time between table stopping and camera shutter being fired):

1, 2, 4, 6, 10, 20, 30, 60, 90, 120

Camera shutter on/off delay time options - seconds (Time between the shutter being on and off):

1, 2, 3, 4, 5, 10, 20, 30, 60 (note: - If 1 shot is selected, shutter will open at the start of the rotation and close at the end to allow for video or burst shooting.)

Power supply included.

### **Compatible cameras:**

#### **Canon - N3**

EOS R3, R5 / EOS 1D, 1D C, 1D Mark II, 1D Mark III, 1D Mark IV, 1D Mark II N / EOS 1Ds, 1Ds Mark II, 1Ds Mark III / EOS 1D X, 1D X Mark II / EOS 1V / EOS 3 / EOS 5D, 5D Mark II, 5D Mark III, 5D Mark IV / EOS 5DS / EOS 5DS R / EOS 6D, 6D Mark II / EOS 7D, 7D Mark II / EOS 10D, 20D, 20Da, 30D, 40D, 50D / EOS D30, D60, D2000

#### **Canon - E3**

EOS R10, R7, R6, R6 Mark II, R, Ra, RP, EOS 3000, 7, 7s, 30, 33, 50, 50E, 55, 60D, 60Da, 70D, 77D, 80D, 90D, 100D, 200D, 200D II, 250D, 300, 300D, 300V, 300X, 350D, 400D, 450D, 500, 500D, 550D, 500N, 600D, 650D, 700D, 750D, 760D, 850D, 800D, 1000D, 1100D, 1200D, 1300D, 1500D, M5, M6, M6 Mark II

#### **Nikon MC-DC2**

Z6, Z7, Df, D90, D600, D610, D750, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D5500, D5600, D7000, D7100, D7200, D7500, Coolpix P7700, P7800, P1000

#### **Nikon MC-30/36**

Nikon D1, D1H, D1X, D2H, D2Hs, D2X, D2Xs, D3, D3x, D3s, D4, D4s, D100, D200, D300, D300s, D500, D700, D800, D810, D850, F5, F6, F90, F90x, F100

#### **Panasonic**

Panasonic S1/ S1R/ S1H/ S5/ S5 II/ S5 IIX, GX8/ GX7/ GH7/ GH6/ GH5/ GH4/ GH3/ GH2/ GH1/ GF1/ G9M2/ G9/ G9II/ G7/ G6/ G5/ G3/ G2/ G1/ G10, FZ50S/ FZ50K/ FZ50/ FZ30S/ FZ30K/ FZ30/ FZ20S/ FZ20K/ FZ20 FZ300/ FZ200/ FZ150/ FZ100, FZ2000/ FZ1000,

#### **Fujifilm**

X100VI GFX100S X-H2S, X-T1, X-T2, X-T3, X-T4, X-T10, X-T20, X-T30, X-T30 II, X-T100, X100F, X100T, X100V, GFX 50R, GFX 50S, GFX 50S II, GFX100, GFX100S, X-Pro2, XF10, X-H1, X-E2, X-E2S, X-E3, X-A5, X-A10, X30, X70

#### **Sony**

A1, A9, A9 II, A7, A7 II, A7 III, A7 IV, A7R, A7R II, A7R III, A7R IIIA, A7R IV, A7R IVA, A7S, A7S II, A7S III, A7M2K, A58 ZV-1, A6000, A6100, A6300, A6400, A6500, A6600, A5000, A5100, A3000, A3500 / CYBER-SHOT DSC-RX1R II, RX10, RX10 II, RX10 III, RX100II, RX100III, RX100M4, RX100M5, RX100M6, RX100M5A, RX100M7, HX50, HX50V, HX60, HX60V, HX80, HX90, HX90V, HX300, HX350, HX400, HX400V, QX30, WX500, 77M2, 99M2, NEX-3NL, ILCA-68, ILCE-QX1

#### **Olympus/OM Systems**

OM-1, OM-1 Mark II, OM-5, Olympus OM-D E-M1X, E-M1 Mark II, E-M1 Mark III, EM5 Mark III

