

TRN-300-P

Photogrammetry turntable, 300mm Dia.

Specification:

Table Diameter: 300mm
Table Load Capacity: 10Kg

Table speed range: Slow: ~ 1rpm, Medium ~ 3rpm, Fast ~ 6rpm

Number of shots/rotation options:
1, 4, 10, 30, 60, 90, 120, 150, 180, 360.

Shot delay - seconds (Time between table stopping and camera :
1, 2, 4, 6, 10, 20, 30, 60, 90, 120

Camera shutter on/off delay time options - seconds (Time between the shutter being on and off):
1, 2, 3, 4, 5, 10, 20, 30, 60 (note: - If 1 shot is selected, shutter will open at the start of the rotation and close at the end to allow for video or burst shooting.)

Power supply included.

Compatible cameras:

Canon

EOS R3, R5 / EOS 1D, 1D C, 1D Mark II, 1D Mark III, 1D Mark IV, 1D Mark II N / EOS 1Ds, 1Ds Mark II, 1Ds Mark III / EOS 1D X, 1D X Mark II / EOS 1V / EOS 3 / EOS 5D, 5D Mark II, 5D Mark III, 5D Mark IV / EOS 5DS / EOS 5DS R / EOS 6D, 6D Mark II / EOS 7D, 7D Mark II / EOS 10D, 20D, 20Da, 30D, 40D, 50D / EOS D30, D60, D2000
EOS M5, M6, EOS R, EOS 3000, EOS 7, EOS 7s, EOS 30, EOS 33, EOS 50, EOS 50E, EOS 55, EOS 60D, EOS 60Da, EOS 70D, EOS 77D. EOS 80D, EOS 100D, EOS 200D, EOS 300, EOS 300D, EOS 300V, EOS 300X, EOS 350D, EOS 400D, EOS 450D, EOS 500, EOS 500D, EOS 550D, EOS 500N, EOS 600D, EOS 650D, EOS 700D, EOS 750D, EOS 760D, EOS 800D, EOS 1000D, EOS 1100D, EOS1200D, EOS 1300D, EOS 1500D

Nikon

Z6, Z7, Df, D90, D600, D610, D750, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D5500, D5600, D7000, D7100, D7200, D7500, Coolpix P7700, P7800, P1000

Panasonic

DC-S1, DC-S1R, DC-S1H, DC-S5, DC-G9 DMC-FZ20, DMC-FZ20K, DMC-FZ20S, DMC-FZ30, DMC-FZ30K, DMC-FZ30S, DMC-FZ50, DMC-FZ50K, DMC-FZ50S, DMC-FZ100, DMC-FZ150, DMC-FZ200, DMC-FZ300, DMC-FZ1000, DMC-FZ2000 DMC-G1, DMC-G2, DMC-G3, DMC-G5, DMC-G6, DMC-G7, DMC-G10, DMC-GF1, DMC-GH1, DMC-GH2, DMC-GH3, DMC-GH4, DMC-GH5, DMC-GX7, DMC-GX8, L1, L-10, LC-1 Leica DIGILUX 2, DIGILUX 3, V-LUX1, V-LUX2.

Fujifilm

GFX 50R, GFX 50S, GFX100, X-T100, XF10, X100T, X100F, X-Pro2, X-E2, X-E2S, X-E3, X-H1, X-A5, X-A10, X-T1, X-T2, X-T3, X-T10, X-T20, X-T30, X70, X30

Sony

A7, A7 II, A7 III, A7R, A7R II, A7R III, A7R IV, A7S, A7S II, A7M2K, A9, A58, A6000, A6300, A6400, A6500, A5000, A5100, A3000, A3500, RX1R II, RX10, RX10 II, RX10 III, RX100II, RX100III, RX100M4, RX100M5, RX100M6, RX100M5A, RX100M7, HX50, HX50V, HX60, HX60V, HX80, HX90, HX90V, HX300, HX350, HX400, HX400V, QX30, WX500, 77M2, 99M2, NEX-3NL, ILCA-68, ILCE-QX1

